

# XS Drainage (3-1-2011)


## Cross-Drain New

Places Cross-Drains on X-Sections. One section at a time. Flowlines can be entered or DP sent to end of foreslope for Flowline.




## Cross-Drain Extend

Extends Existing CrossDrain on X-Sections. One side at a time. Flowlines can be entered or DP sent to end of foreslope for Flowline. Note: In the case below a FL Elevation for the pipe was entered so the user had to also enter the XS Cell EL (390) and had to DP Center of XS Cell.

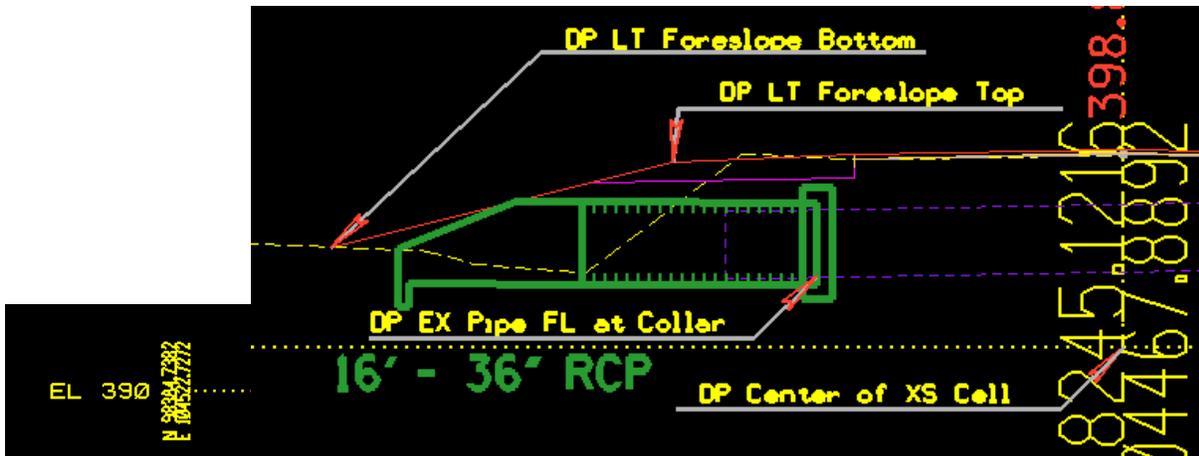

### Median Inlet (& Pipe)

Places Median Inlet with pipe (Half section). Flowlines can be entered or DP sent to end of foreslope for Flowline.

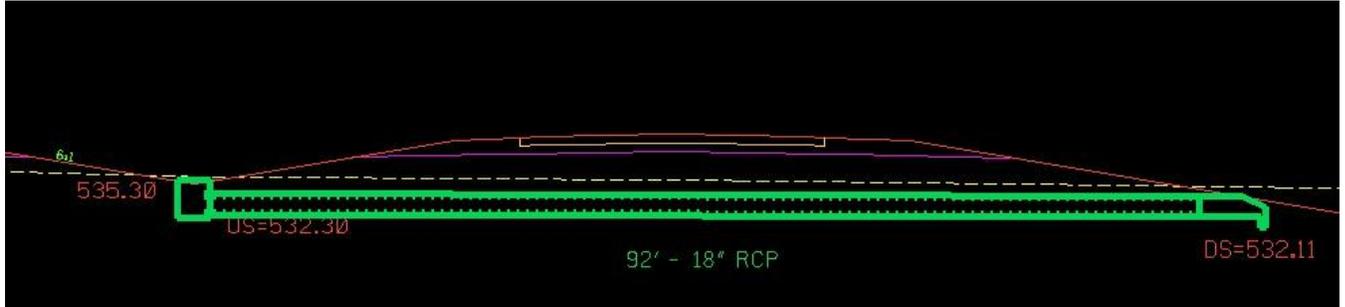

### Median Inlet1 (to Pipe)

Places Median Inlet to pipe. Flowlines can be entered or DP sent to end of foreslope for Flowline.

